

PARTS LIST
FIG. 8910 THROTTLE TRIP VALVES (TTV)

PC NO	PARTS LIST DESCRIPTION	RECOMMENDED SPARE PARTS		
		FOR INSPECTION	MINOR OVERHAUL	MAJOR OVERHAUL
	BODY, VALVE			
2	SEAT			1
3	DISC		1	1
4	NUT, HEX		AR	ALL
5	STUD		AR	ALL
6	STUFFING BOX			
7	PLUG, PIPE			
8	BUSHING, LEAKOFF			1
9	GASKET	1	1	1
10	PILOT VALVE & STEM		1	1
11	STRAINER BASKET		1	1
12	CAPSCREW, SOC HD		AR	ALL
13	FLANGE, DISC		1	1
14	GASKET	1	1	1
15	NUT, HEX		AR	ALL
16	STUD		AR	ALL
17	COVER, VALVE			
18	YOKE			
19	FLANGE, YOKE			
20	CAPSCREW, SOC HD			ALL
21	BUSHING, LEAKOFF			1
22	NUT, HEX		2	2
23	CAPSCREW, HEX HD		2	2
24	FITTING GREASE		2	ALL
25	PIN, LATCH LEVER			1
26	CAPSCREW, SOC HD			
27	SPRING	1	1	1
28	CAPSCREW, SOC HD			
29	NAMEPLATE			
30	SCREW, DRIVE			
31	PLATE, MOUNTING			
32	SETSCREW			1
33	PISTON			1
34	GASKET	1	1	1
35	CYLINDER			
36	PLATE, WARNING			
37	WASHER			
38	SPRING	1	1	1
39				
40	SPRING CASE			
41	NUT, HEX			
42	STUD			
43	SETSCREW			
44	NUT, ADJUSTING			
45	STEM, PISTON			1
46	PIN			1
47	LINK, SLOTTED			
48	PIN			1
49	PIN, COTTER			2
50	TRIP CRANK			
51	KEY			1
52	SETSCREW			1
53	PLUG, PIPE			
54	SCREW, LOCKING			
55	THROTTLE SCREW			
56	SETSCREW			
57	SETSCREW			2
58	NUT, HEX			2
59	LEVER			
60	KEY			1
61	SETSCREW			1
62	NUT, HEX			1
63	NAMEPLATE			
64	HANDWHEEL			
65	NUT, YOKE			
66	SPRING	1	1	1
67	PIN			
68	WASHER, FLAT			
69	NUT, HEX			
70	PIN, TRIP HOOK			1
71	TRIP HOOK			
72	LATCH LEVER			
73	NUT, SLIDING		1	1
74	SCREW SPINDLE		1	1
75	WASHER, SPLIT	1	1	1
76	WASHER, THRUST	1	1	1
77	SETSCREW		1	1
78	COUPLING		1	1
79	PLUG, PIPE			
80	PLATE, TURBINE END			

Note: When ordering spare parts, refer to shop order numbers stamped on name plate PC NO 29 or 63.
AR = As required

