

PARTS LIST
FIG. 8950 INVERTED THROTTLE TRIP VALVE (TTV)

PC NO	DESCRIPTION
1	COVER WITH CYLINDER
2	BODY
3	DISC FLANGE
4	DISC
5	SEAT
6	PILOT VALVE WITH STEM
7	DISTANCE WASHER
8	LEAK-OFF BUSHING
9	SPLIT COUPLING
10	SPLIT WASHER
11	TENSION SPRING
12	LINK
13	SLIDING NUT
14	TRUNNION
15	SCREW SPINDLE
16	SPRING BOLT
17	YOKE
18	LOCK NUT
19	HANDWHEEL
20	SCREW SPRINDLE GUIDE
21	LATCHING-UP LEVER
22	TRIP HOOK
23	SPRING PIN
24	COMPRESSOR SPRING
25	FRICITION WASHER
26	BOTTOM STUFFING BOX
27	THROTTLE SCREW
28	PISTON STEM
29	ADJUSTING NUT
30	COMPRESSOR SPRING
31	OIL CYLINDER
32	PISTON
33	SPRING CASE
34	LATCH HOOK
35	TRIP CRANK
36	TENSION SPRING
37	PACKING RING
38	PACKING
39	GLAND
40	SEAT SCREW

Note: When ordering spare parts, refer to shop order numbers stamped on name plate mounted on body or handwheel, PC NO 2 OR 19.

